




Variable Speed 1200mm Wood Lathe

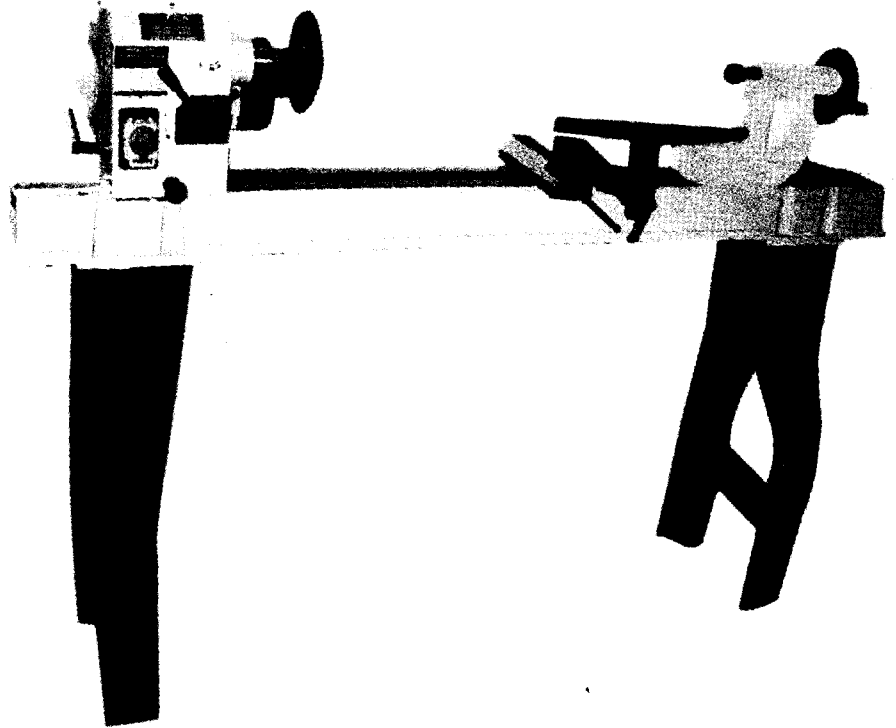

Please read and fully understand the instructions in this manual before operation. Keep this manual safe for future reference

TECHNICAL DATA

SIP MODEL NUMBER	01490
Input voltage	230v / 50hz
Motor	550 watts
Speed	500rpm - 2000rpm
Distance between centres	1200 mm
Swing over bed	370 mm
Drive spindle	3/4" (16 TPI)
Drive spindle through hole	10 mm
Tailstock spindle through hole	10 mm
Tailstock shaft travel	57 mm
Headstock spur	Spur centre (morse taper #1)
Tailstock centre	Bearing centre (morse taper #2)
Net. Weight	132 kg
Noise	68 dB(A)

UNPACKING

CAUTION:

THE WOOD LATHE IS VERY HEAVY AND MUST BE LIFTED WITH THE HELP OF 2 OR MORE PEOPLE. THE ASSEMBLY PROCESS REQUIRES 2 OR MORE PEOPLE TO SAFELY ASSEMBLE THE LATHE TO THE LEG SET.

1. Carefully remove the leg set and wood lathe from the carton.
2. Separate the parts for the leg set from the parts of the lathe.
3. Lay out all parts and check them against the parts listed (see page 6).
4. Examine all parts carefully.

WARNING: If any of the parts are missing or damaged, contact your distributor immediately.